


SharqEdges™

INSTRUCTIONS

► The Sharp Quick Mount Edge System

MOUNTING INSTRUCTIONS FOR SHARQEDGES QMS 3/4"

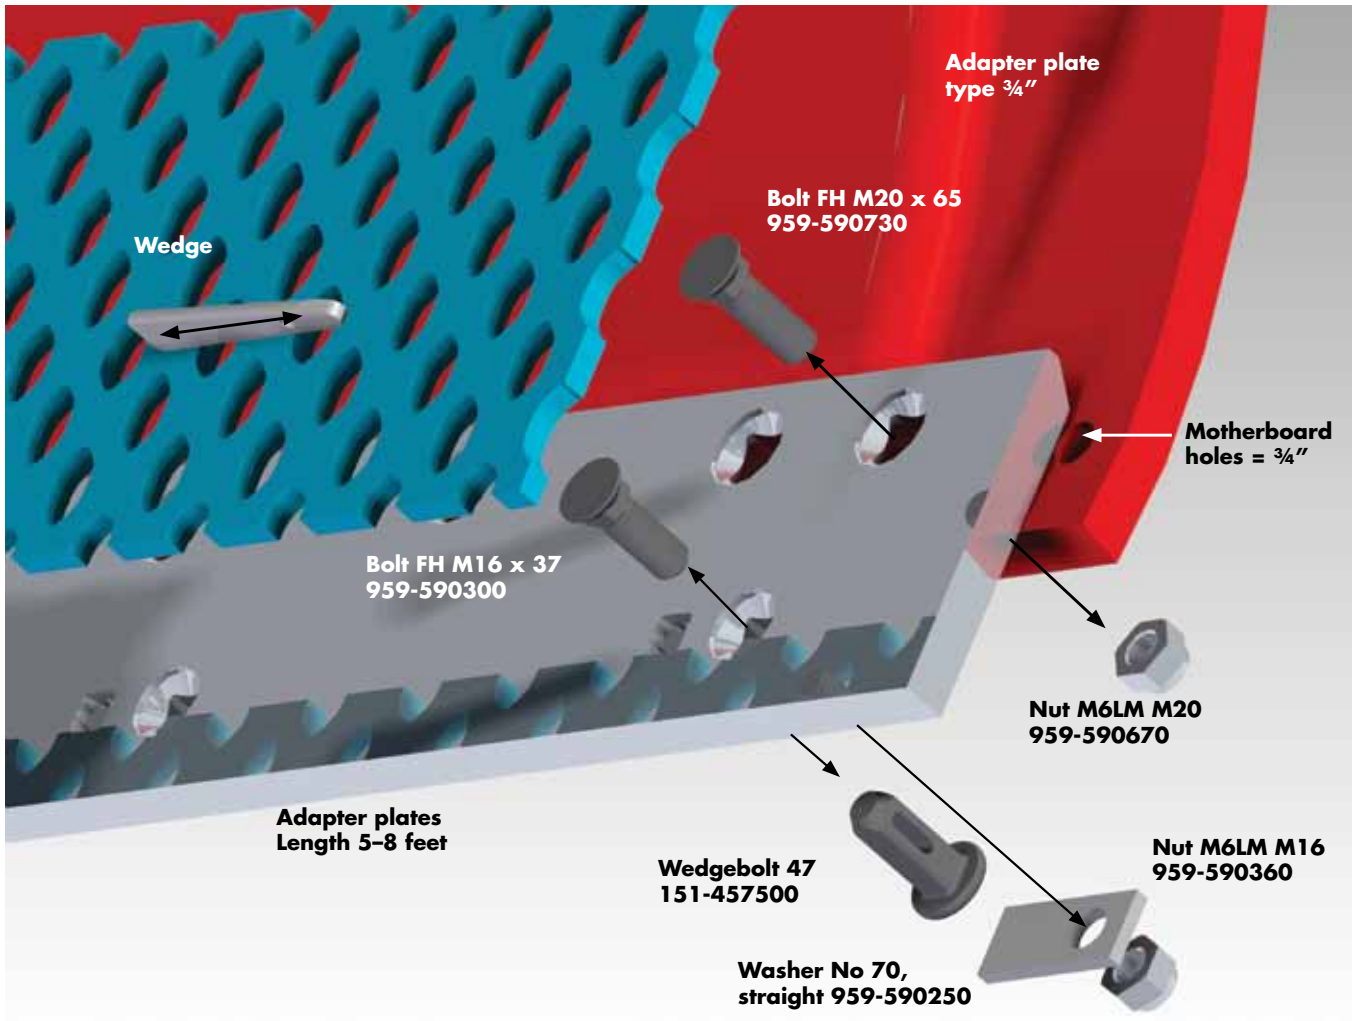


Note: FH M20 = FH 3/4" with 5/8" head
For blades <11mm, use wedge 20,5 (151-455980) or 20,5 (151-455960).
For blades >12mm, use wedge 20,5 (151-455980) or 18,5 (151-455950).

Number of parts needed for each adapter plate.

Length	Adapter plate	Wedge	Wedgebolt 47	Washer no 70	Bolt FH M16 x 37	Nut M16 locking	Bolt FH M20x65	Nut M20 locking
5 feet	122-361130	5 x	5 x	5 x	5 x	5 x	11 x	11 x
6 feet	122-361150	6 x	6 x	6 x	6 x	6 x	13 x	13 x
7 feet	122-361090	7 x	7 x	7 x	7 x	7 x	15 x	15 x
8 feet	122-361180	8 x	8 x	8 x	8 x	8 x	17 x	17 x

MOUNTING INSTRUCTIONS FOR SHARQEDGES QMS 5/8"

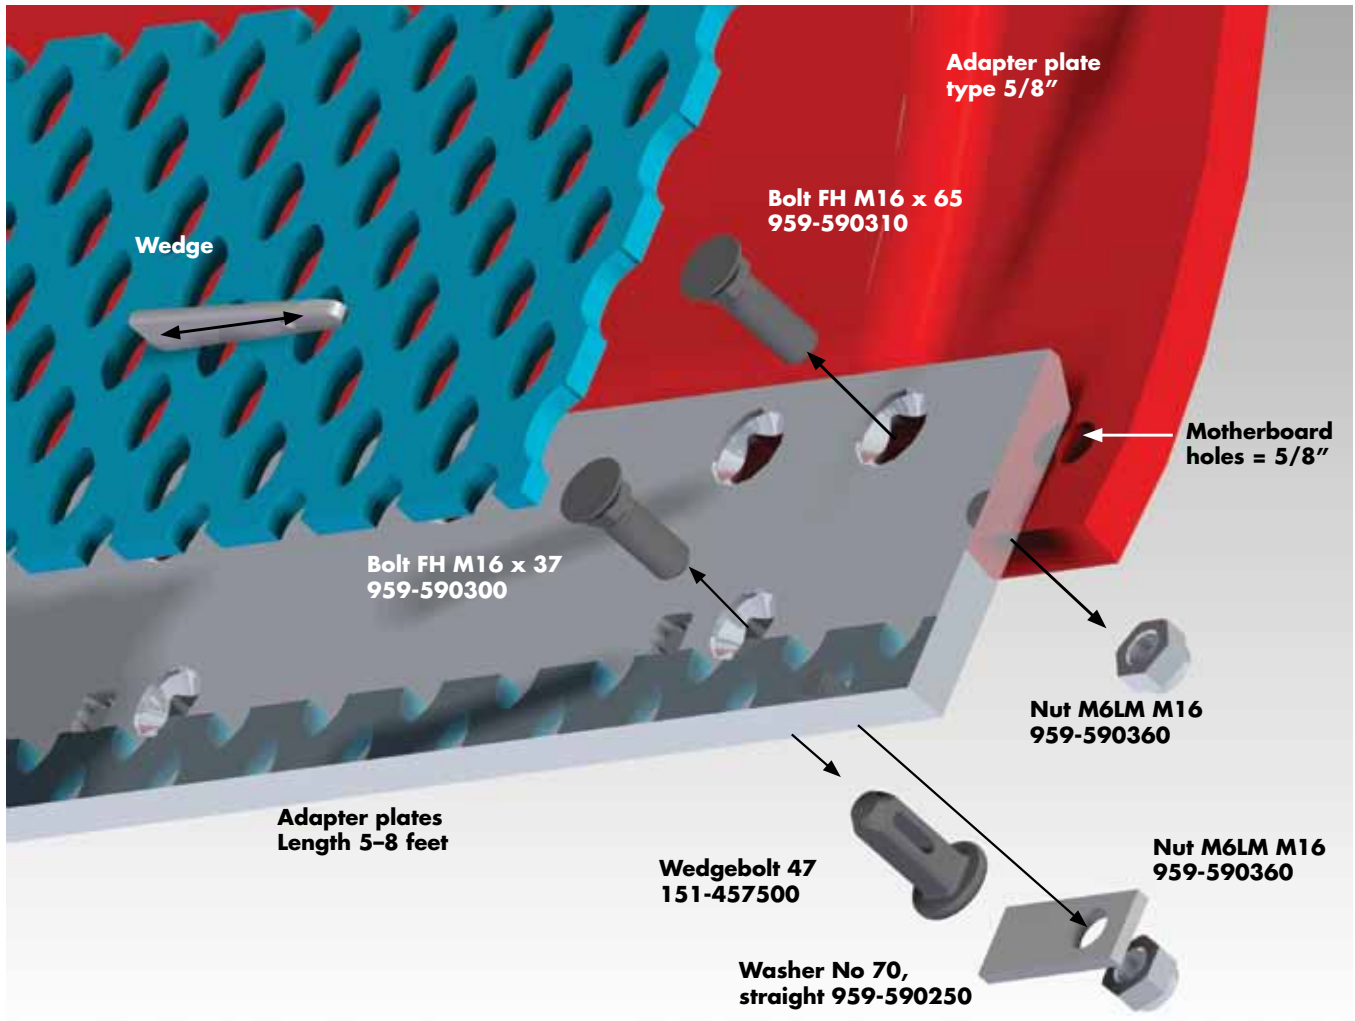

Note: FH M16 = FH 5/8"
For blades <11mm, use wedge 20,5 (151-455980) or 20,5 (151-455960).
For blades >12mm, use wedge 20,5 (151-455980) or 18,5 (151-455950).

Number of parts needed for each adapter plate.

Length	Adapter plate	Wedge	Wedgebolt 47	Washer no 70	Bolt FH M16 x 37	Nut M16 locking	Bolt FH M16x65	Nut M16 locking
5 feet	122-361120	5 x	5 x	5 x	5 x	5 x	11 x	11 x
6 feet	122-361140	6 x	6 x	6 x	6 x	6 x	13 x	13 x
7 feet	122-361160	7 x	7 x	7 x	7 x	7 x	15 x	15 x
8 feet	122-361170	8 x	8 x	8 x	8 x	8 x	17 x	17 x

MOUNTING INSTRUCTIONS



- 1** Remove the old cutting edge.



- 2** Clean the mold board.



- 3** The support washers are attached to the mounting plates with bolt 16x37 mm (5/8" x 1 1/2") and "Triloc" M16 (Lock nut 5/8").



- 4** Attach the mounting plates with bolts FH 16x65. FH 16x90 are needed if there is a reinforced area on the mold board. (If mother board holes are 3/4", use M20 bolts and nuts.)



- 5** The mounting plates are attached to the mold board with a distance of 6" (152.5 mm) or 12" (305 mm).

MOUNTING INSTRUCTIONS



- 6** Before tightening the bolts for the support washers, the wedge bolts should be put in place (with the "eye" horizontal).




- 7** Now you can install the SharqEdges on the mounting plate. The blade should be attached approx. 2" below the bottom edge of the mounting plate. Lock with wedges. Use Safety Goggles!



- 8** The grader is now ready to be used.



- 9** Tighten the bolts after a couple of hours driving.

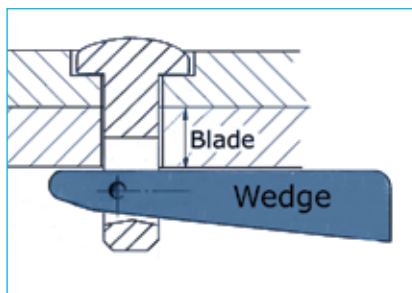

- 10** To be able to use our different blade models you have to use the right combination of wedge and blade.
For blades <11mm, use wedge 20,5 (151-455980) or 20,5 (151-455960).
For blades >12mm, use wedge 20,5 (151-455980) or 18,5 (151-455950).